 


20.7 X 29.7 cm

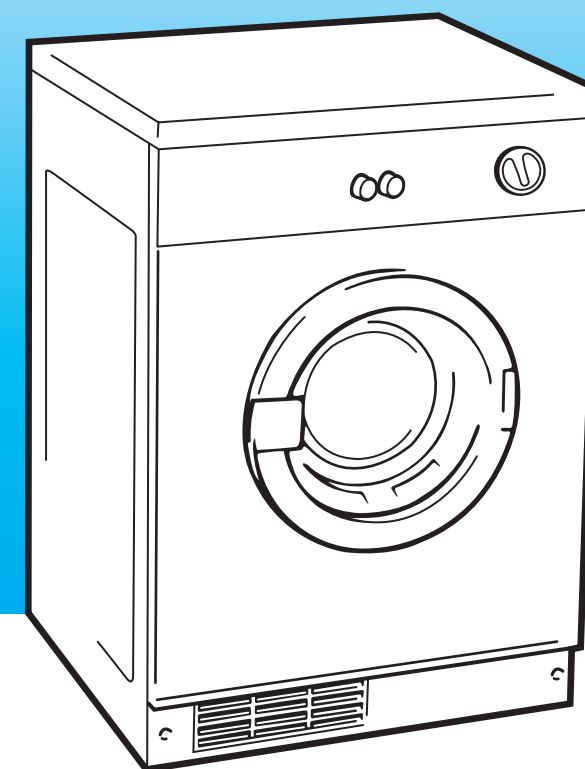

惠而浦

AWG 288S

Whirlpool AWG 288 Hong Kong

規格

體積：高85厘米
闊59.5厘米
深53厘米

棉質及麻質乾衣量：6千克

有關電力規格，請參看機背的數據銘牌。

本產品符合82/499/EEC無線電干擾的規定。此乾衣機乃家庭電器用品，並不適合商業用途。

 
附加配件

閣下的銷售商/零售商提供銷售各種適合不同安裝需要的配件：
機背通風裝置AWF 790。


選放式裝置AWF 696：此裝置可使乾衣機放在惠而浦前置式洗衣機的上面，節省地方。

安裝 (不用拿走門鉸蓋)


- 1 將乾衣機裝近窗戶，讓濕氣容易散發。
 - 2 最好採用獨立式的通氣喉，以防濕氣凝聚水滴。
 - 3 切勿阻塞乾衣機機背的空氣入口位置。勿讓毛屑在乾衣機周圍積聚。
- 依照下圖安裝過濾網：

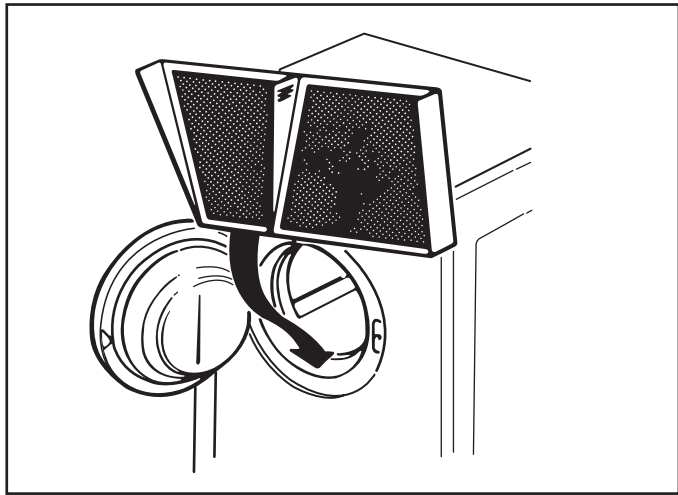


乾衣機門可以從左面或右面打開，請依圖一至三的指示更改開門的方向：

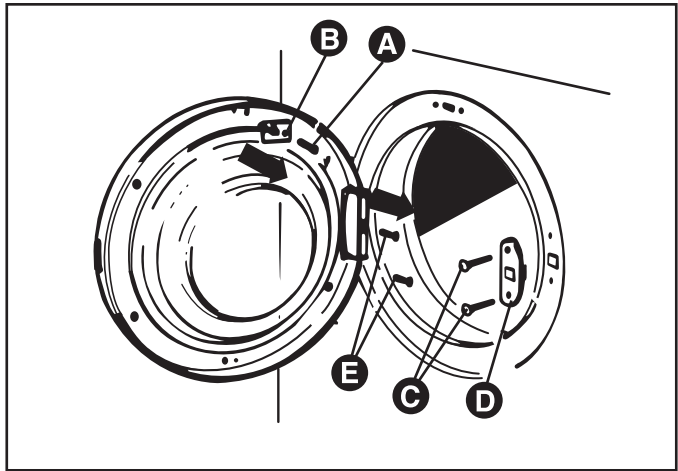 

 圖一：先打開機門，擰出螺絲 (A)，取下機門觸通板 (B)，再裝回螺絲。然後擰出螺絲 (C) 及門鎖板 (D)，再擰出門鉸上的螺絲 (E)，並移開機門。

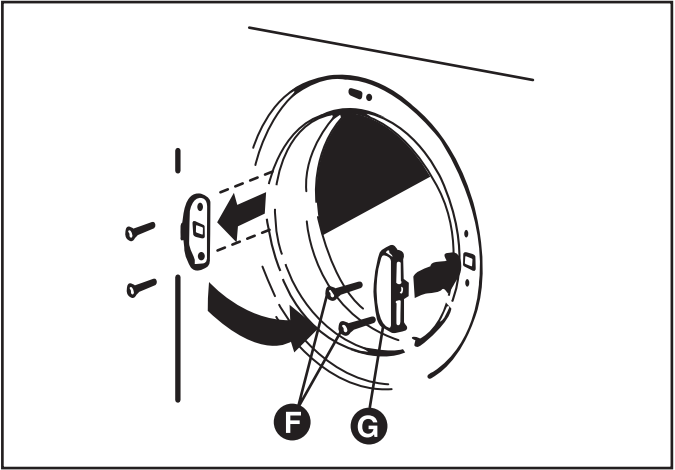

圖二：先擰出門鉸螺絲 (F)，拿走門鉸 (G)，再裝上對面位置。

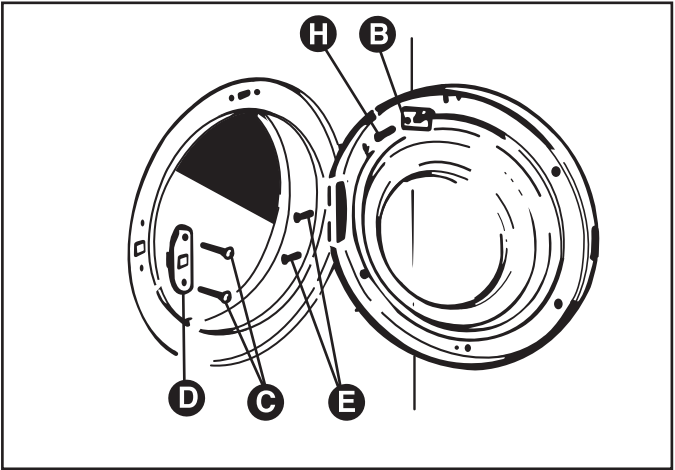 

圖三：先用螺絲 (C) 裝上門鎖板 (D)，再擰出門頂的螺絲 (H)，及再裝上機門觸通板 (B)，最後裝上螺絲 (E) 以鎖緊門鉸上蓋。

20.7 X 29.7 cm

Programme chart				
FABRIC	MAXIMUM WEIGHT OF DRY LAUNDRY	HEAT	TIME SETTING (Minutes)	
			IRON DRY	CUPBOARD DRY
Cotton, Linen	6kg		70-110	100-140
Cotton, Linen	3kg		60-80	80-100
Synthetics	3kg		50-80	70-80
NOTE: Drying times depend on the weight and size of the articles, the type of fabric, how damp they are and how dry you need them. Higher spin speeds on your washer require less drying time. To reduce creasing never overload.				

Fabric care

If in any doubt of the type of fabric from which the garment is made, check the care label inside the garment.

The vast majority of textile articles can safely be tumble dried. However, we do not recommend you tumble dry woolen or wool mixture articles unless the article is labelled as being suitable.

Points to remember

- Do

 - Sort the clothes into groups of different fabrics.
 - Check that all fastenings are closed and pockets are empty.
 - Turn sweaters inside out.
 - Dry large and small articles in the same load if possible.
 - Check the programme chart for the correct heater setting.
 - Clean the filter after removing the dried clothes.
- Don't

 - Overload the dryer.
 - Place dripping wet articles in the dryer.
 - Dry articles that have been treated with a dry cleaning fluid.
 - Dry articles containing foam rubber or rubber like materials in the dryer.
 - Dry large articles alone as they tend to roll up and so increase drying time.
 - Switch the dryer off and leave a hot load in the drum-risk of fire.

TIPS:

- To reduce static electricity in fabrics, use a fabric conditioner during the final rinse of your washing.
- Dry delicate articles, e.g. tights, in a pillow case.
- Take synthetics out of dryer as soon as programme has finished to prevent creasing.

Any problems

IF THE CLOTHES ARE NOT DRY AFTER NORMAL DRYING TIME:


- Check that the filter is clean.
- Check that you used the correct heater setting.
- Check that the venting hose is not blocked (sometimes a strong wind may cause a back pressure).
- Check that you have not set the timer within a cool down period.
- Check that the heater cut-out has not operated. Simply press the red button on the right hand side at the back of your dryer. If it has operated then a sharp “click” will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean and that all other restrictions are removed before re-starting.

IF YOUR MACHINE DOES NOT WORK, CHECK THE FOLLOWING POINTS BEFORE CALLING A SERVICE ENGINEER:

- Check that there is a supply of electricity.
- Check that the machine is switched on and the door properly closed.
- Check the plug internal connections and fuse, if applicable.

CARE LABELS YOU MAY FIND ON YOUR FABRICS:	
	Tumble drying beneficial
	Do not tumble dry
	Dry flat

 Control panel

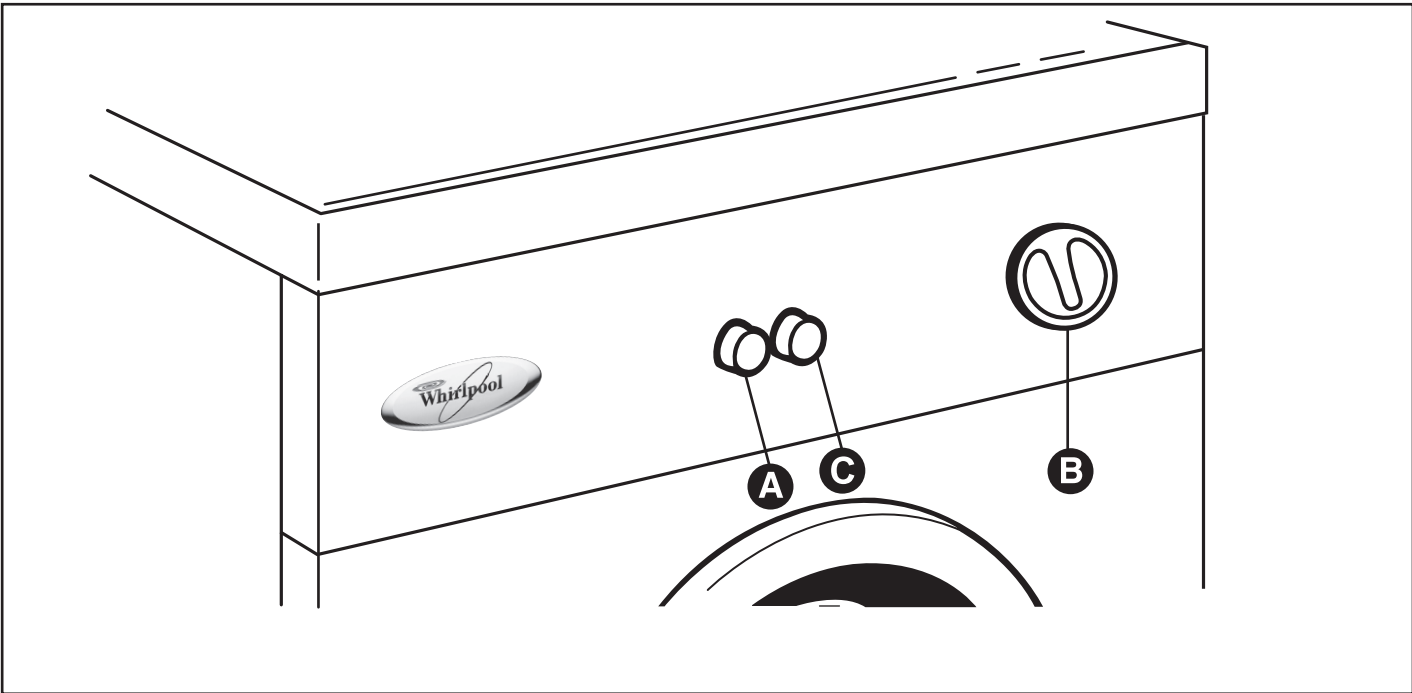

- A** The heat selector switch ☀ = Low Heat
 ☀ = High Heat
- C** Start button
- B** The timer can be set for up to 140 minutes. Turn the knob clockwise to the time required. There is an automatic cool down period of approximately 10 minutes at the end of each setting.


Operating procedure

1	A. Sort out clothes into groups of similar fabrics B. Check all fastenings are closed and pockets empty C. Roll dripping wet clothes in a towel to remove excess water D. Turn sweaters inside out
2	A. Open the door B. Load clothes loosely into the drum, load sheets first starting with one corner C Remember it is best to dry small and large articles together
3	A. Close the door B. Dry your hands C. Check that the timer is in the 'O' position D. Plug in the machine
4	A. Select correct heater position (see programme chart) B. To start the cycle, set the timer (see programme chart) then press "Start" button, the drum will begin to rotate at this point and stop when the timer reaches the 'O' position.

5	A. To stop the machine in the middle of a programme, simply open the door and the drum will stop moving B. To re-start close the door, press "Start" button again. C. To lengthen or shorten the drying time at any time during the programme, turn the timer knob.
6	We recommend you to stop your dryer and redistribute large items such as sheets several times during the programme.
7	A. After removing the dried clothes clean the filter as follows: <ul style="list-style-type: none">• Pull the filter upwards• Remove any thread or fluff by hand or with a soft brush• Slide the filter back• Wash the filter occasionally in detergent solution and with a soft brush to remove small particles B. Disconnect from the electricity supply

20.7 X 29.7 cm

 控制板

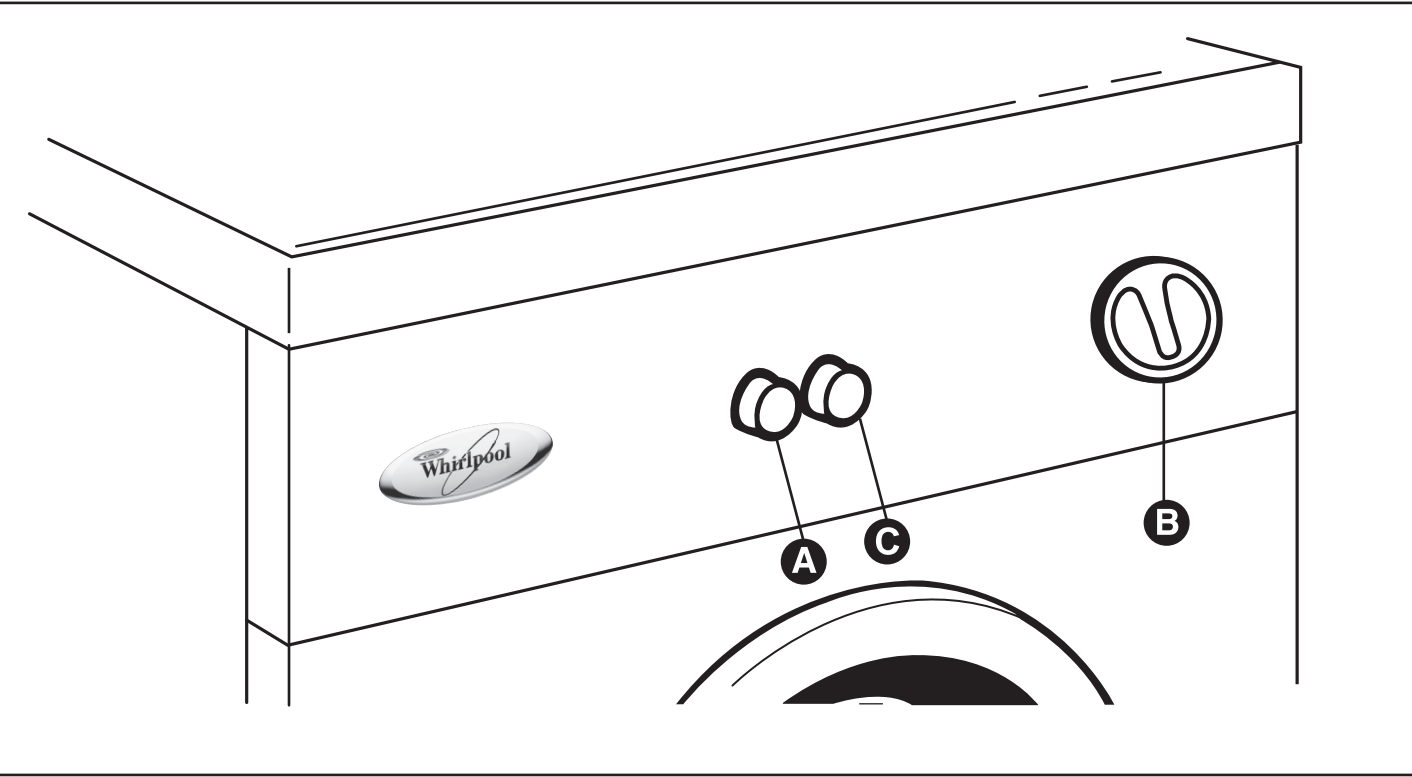






- A 溫度選擇掣 ☀ = 低溫掣
 ☀ = 高溫掣
- C 啟動掣
- B 時間可調校至140分鐘
將旋鈕按順時針方向旋轉，直至所需的乾衣時間。
乾衣程序最後10分鐘為自動冷卻時間。

操作程序

1	A. 根據質料將衣物分類。 B. 檢查鈕扣、拉鏈是否上好、口袋裡的物件是否已拿出來。 C. 不要將濕至滴水的衣物放進桶內，應先用毛巾捲壓衣物，除去過多水份。 D. 將毛衣向外翻出。
2	A. 開啟機門。 B. 將衣物放入乾衣鼓，但不要塞得太緊。若有床單，應先把床單一角放入。 C. 最好將大件及小件衣物同時烘乾。
3	A. 關閉機門。 B. 抹乾雙手。 C. 檢查時間掣是否指示在“O”位置。 D. 插好電掣。
4	A. 選擇正確的乾衣溫度(請參看程序表)。 B. 調校時間掣後，按“啟動”掣，即可啟動乾衣程序(請參看程序表)。 乾衣鼓會開始旋轉，直至時間掣轉至“O”位置便停止。

5	A. 如要中途停止操作，只需將機門打開，乾衣鼓即停止轉動。 B. 關門後再按“啟動”掣，乾衣機便再繼續操作。 C. 如要延長或縮短乾衣時間，只需在操作進行時，調校時間掣。
6	若有大件衣物如床單，最好能在乾衣過程中停機，將衣物重新擺放均勻。
7	A. 取出處理好的衣物後，應依下列程序清潔過濾網： <ul style="list-style-type: none">• 將過濾網向上拉• 用手或軟毛刷清除絲線及毛頭• 將過濾網推回原位• 有需要時，用洗衣劑清洗過濾網，或用軟毛刷除去塵垢。 B. 關閉電源。

乾衣程序表				
		時間 (分鐘)		
衣物質料	乾衣量	溫度	半乾 (需熨乾) 	全乾 
棉質、麻質	6 千克		70-110	100-140
棉質、麻質	3 千克		60-80	80-100
合成纖維	3 千克		50-80	70-80
注意：乾衣所需時間，要視乎衣物的重量、大小、質料、濕漉和需乾衣程度而定。 洗衣時採用較高的乾衣轉速，可縮短乾衣時間。切勿同時處理太多衣物，以避免衣物起皺。				

衣物護理

若不肯定衣物質料的類別，請查看衣物上的標籤。大部份衣物都可用機絞乾。不過，除非特別註明，否則不要用機器絞乾羊毛及混有羊毛的衣物。

乾衣要點

切記

按照衣物質料分類。




檢查鈕扣、拉鏈是否上好、口袋裡的雜物是否已拿出來。

將毛衣向外翻出。

若可以的話，將大件及小件的衣物同機絞乾。

按照乾衣程序表，調校適當溫度。

乾衣完畢取出衣物後，必須清理過濾網。

衣物上之乾衣指示標籤	
	可絞乾
	不可絞乾
	需平放晾乾

切勿

<

問題處理

假如衣物在正常乾衣程序後，依然不乾爽，請檢查：	假若乾衣機不能操作，請在聯絡修理人員前，先檢查以下各點：
— 過濾網是否清潔	— 電源供應
— 所用乾衣濕度是否適當	— 乾衣機是否已啟動，機門是否關上
— 通氣喉是否被阻塞 (有時侯，強風可構成反向壓力)	— 電源插頭內部連接及保險絲 (如情況許可)
— 在調校時間時，是否已預計冷卻時間在內	

20.7 X 29.7 cm

English

Technical data

Overall dimensions: Height 85 cm
Width 59.5 cm
Depth 53 cm

Maximum dry weight of cotton, linen: 6kg

For electrical ratings see plate on rear of machine.

This product is manufactured to comply with the radio interference requirements of the council directive 82/499/EEC. It is intended for domestic use and not for commercial applications such as hairdressers.

For the Republic of Ireland

Your dryer is supplied with a 2-pin side earth type of plug which should be connected to a socket protected by a 16 Amp fuse. If this plug is not suitable for your socket outlet, it should be cut off and disposed of, and a suitable alternative plug fitted.

Optional accessories

Comprehensive range of accessories are available for purchase from your dealer/retailer to cater for varying installations, they are:

 
Venting Hose AWF 790.

Stacking Kit AWF 696 to enable your dryer to be secured onto the top of front loading washing machines to save floor space.

Installation (DRYERS FITTED WITHOUT HINGE COVER)


- 1 Install your dryer near a window so that the warm damp air can escape.
- 2 We strongly recommend you to use a separate venting hose to avoid condensation.
- 3 Never block the air inlets at the back of your dryer. Do not allow fluff to accumulate around your dryer.

Put the filter in its operating position as below.

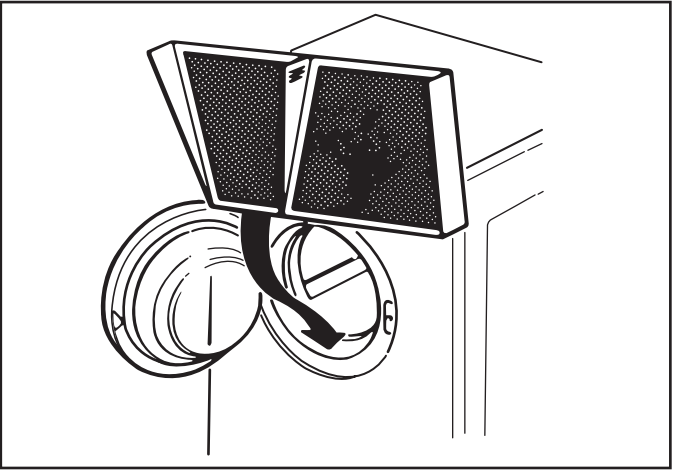


Wipe the drum and door with a damp cloth to remove any dust. Any initial smell from the heater should disappear after the first period of heating.

 
Your dryer is fitted with a reversable door. To change the direction of opening proceed as follows:

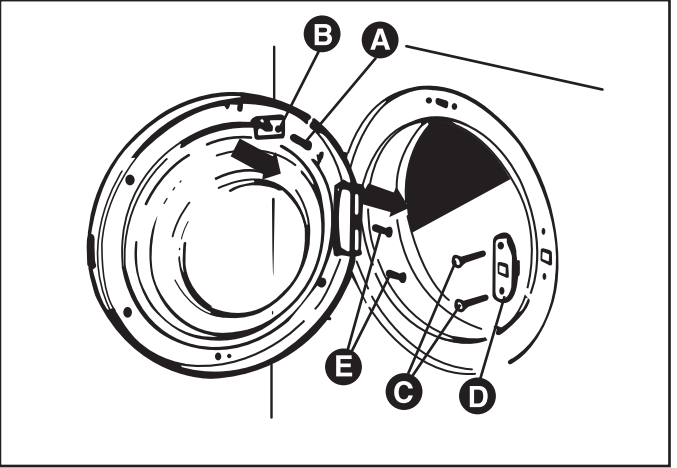

 Open the door. Undo screw **A** remove switch strike **B** and replace screw.
Remove screws **C** and latch plate **D**.
Remove hinge block screws **E**. Remove door from hinge blocks.

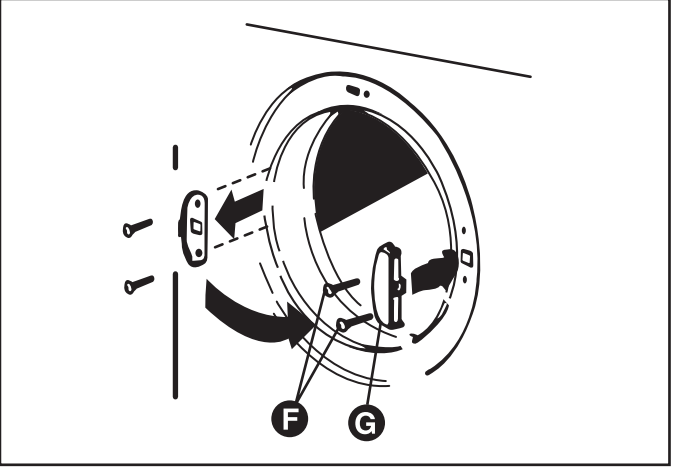

 Remove hinge screws **F** and hinge **G** and refit to opposite sides as shown.

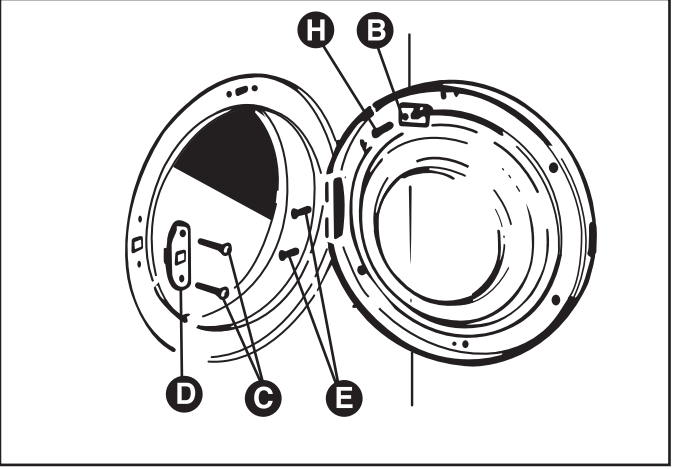

Refit latch plate **D** with screws **C**. Remove screw **H** at top of door and refit switch strike **B** as shown.
Fit door to hinge blocks and secure with screws **E**.